

Dear User,

You have chosen a Movetec Synchronised System for your Actuators/Lifting Columns.

We will step by step follow you to a succesfull connection of your new Synchronised Actuator/Lifting Column System.

This Instruction will be the same for both Movetec MCB-TC-4 Controlbox System and MCB-TC-6 Controlbox System.



Connection of Cables:

Step 1.

Please connect the Cascading Cable in the RJ45/Handset socket in the Movetec MCB-TC-4/6 Controlbox System



Step 2.

Please connect the Motorcables in the Movetec MCB-TC-4/6 Controlbox System.

Step 3.

Please connect the Handset in the end of the Cascading Cable.



Step 4.

Please take the Handset and make a RESET by pressing both the buttons up/down in 3 sec.

Now you are ready to use the system.

IF you have trouble connecting the System or the System does not run as anticipated, please read following:

- If after the RESET you can not move the Actuators/Lifting Columns, please make a Complete New RESET.
- If the System also not move after the 2nd RESET, please check all the cables are connected correct.
- Call Movetec HQ in Denmark +45 64892805 or mail to info@movetec.dk