MOVETEC Solutions ApS

Lollandsvej 1

DK – 5500 Middelfart Tel.: (+45) 64 89 28 05 E-mail: <u>info@movetec.dk</u> Web: www.movetec.dk



Operating Instructions for Control Boxes in the LC-Series

Installation (only for authorized personnel)

- Plug in the drives into the 8-pin molex sockets.
- Connect the handset with the RJ-45 socket in the control box.
- Plug in the main power supply. Please make sure that the operating voltage of the system conforms with the local power supply.

Starting up

Always reset the lifting system to zero before using for the first time: Press the down-button 4 times and then the control box will play a sound. If the actuators are not down at the bottom, the actuators will move down.

Note: Before starting up, make sure that all drives/lifters are plugged in completely and correct and that there cannot be a collision while moving down.

Operating: Use the "Up" or "Down"-buttons to move the drives.









