 



# PLC-Adapter-ST

## Adapter for operating controllers of the LTC and LMC range with potential-free PLC contacts

Connection	RJ 12
Input	Controller
Output	RJ12 to PLC
Function	The controller executes the requested function when the contacts of the RJ 12 plug are bridged

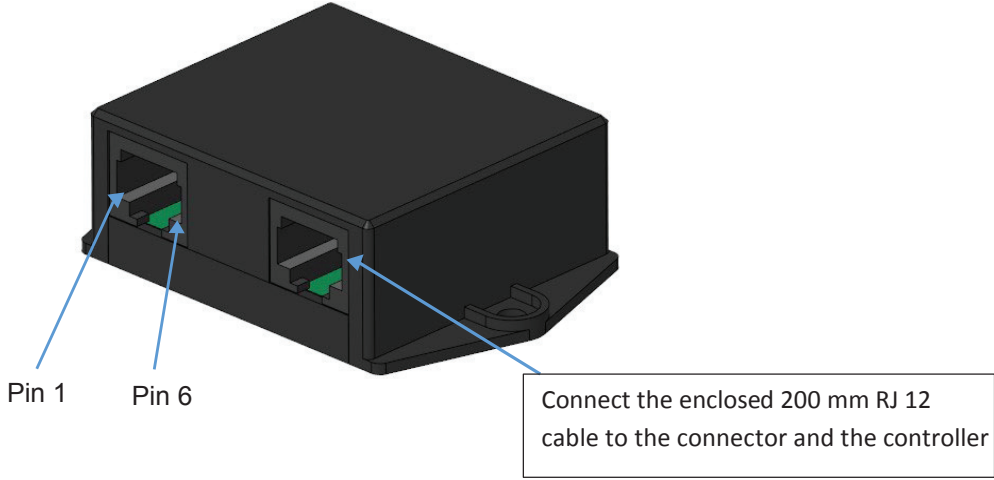


 Connect the RJ12 plug of the enclosed 1 m cable to the connector, the stripped end should be connected to the PLC

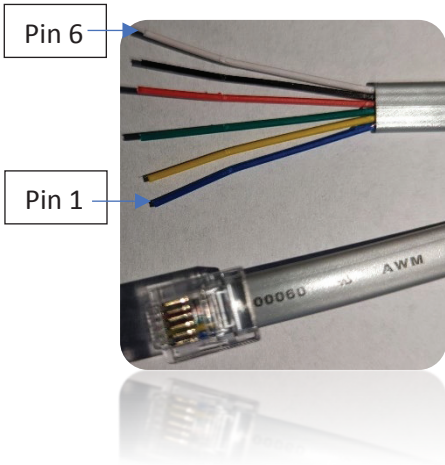


## PLC-Adapter-ST

 The switching contacts of the PLC relays have to be potential-free!  
 Only one contact can be closed at a time which connects the according pin to pin 6.

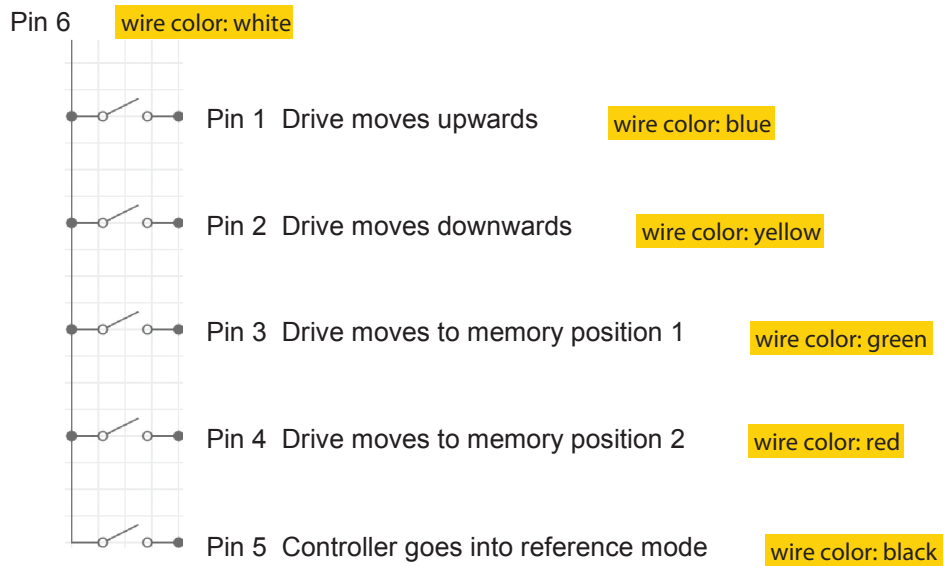

## PLC-Adapter-ST
 
### Dimension drawing

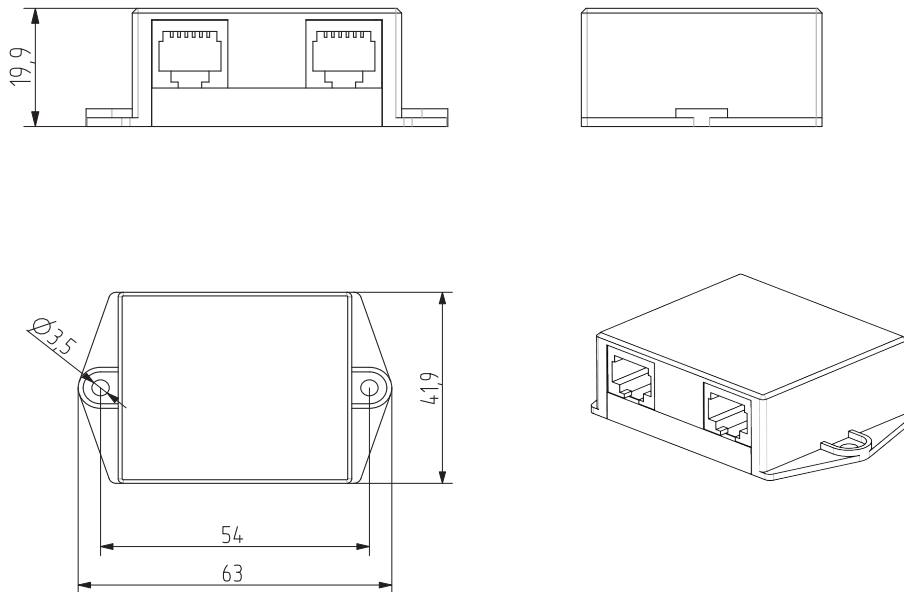

### Accessories

If a screw connector is required instead of the enclosed connection cable a RJ 12 adapter as pictured below can be purchased.

Adapter RJ 12 to screw connectors:

